



# Quick Start Guide

## Details

The QSG provides a quick reference for setting up the Celestix Edge solution.

See the Installation Guide for detailed instructions.

## Assumptions

### Skills and Knowledge

- Networking technology
- Windows Server® management
- Microsoft Active Directory®
- Microsoft Uniied Remote Access
- Network Policy Server\*
- Work Folders\*
- Remote Desktop Web Access\*


\*As required for deployment.

### Network Settings

- Active Directory is used for the domain controller.
- Static IP addresses are reserved for network adapters as needed.

## 1 Installation

- Rack the appliance
- Connect the Primary Port to the network hub or switch.

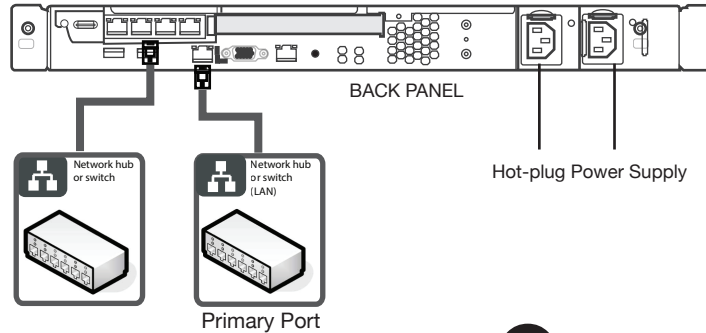

## 2 Setup

- Connect KVM to the appliance.
- Log in to the Windows and assign IP address to LAN interface.
- Open a browser and log in to the web UI.  
<https://ServerName|IP address:8098>  
User name: **administrator**  
Default password: **[Celest1x]**

## 3 Features

- Install necessary features for the deployment.
- Use the wizards for installed features as necessary.
- Use RDP links for features that require additional configuration.

## 4 Features

- To preserve the initial system state take snapshot using either the LGV or System Imaging.
- Create a backup of initial configuration.

## 5 Software Updates

- Check Celestix Software Updates.
- Check Windows Update.