

Quick Start Guide

Details

The QSG provides a quick reference for setting up the CelestixEdge solution.

See the *Installation Guide* for detailed instructions.

Assumptions

Skills and Knowledge

- Networking technology
- Windows Server® management
- Microsoft Active Directory®
- Microsoft Unified Remote Access
- Network Policy Server*
- Work Folders*
- Remote Desktop Web Access*

*As required for deployment.

Network Settings

 
- Active Directory is used for the domain controller.
- Static IP addresses are reserved for network adapters as needed.



Installation

Rack with the provided brackets or slides.

Note: Mounting fasteners are provided, but rack fasteners are not.



Connect LAN0 to the network hub or switch.



Connect the power cable and press the Jog Dial on the front panel.



Setup

Get the LAN0 IP address using front panel controls.



Log in to the web UI.
`https://ServerName|IP address:8098`
administrator
[Celest1x]



Run the setup wizard.



Features

Install necessary features for the deployment.



Use the wizards for installed features as necessary.



Use RDP links for features that require additional configuration.



Disaster Remediation

To preserve the initial system state take snapshot using either the LGV or System Imaging.



Create a backup of initial configuration.



Software Updates

Check Celestix Software Updates.



Check Windows Update.

